# AS-Interface power on three phases

# **PULS**

# **SLA8.300**

• Input: 3 AC 400-500V

No neutral wire required

Output: 30.5V / 8A

- AS Interface data decoupling
- Infrared (IR) addressing mode
- Overload protection by FUSE Mode
- For highly demanding industrial applications



# Short description

#### Data and energy:

The primary switched mode DIN rail power supply SLA8.300 specifically supplies AS Interface® systems with energy. The AS-Interface bus technology allows to connect up to 62 participants to a control and to supply them with energy with a single two-conductor cable. When connecting slaves, the yellow AS-Interface cable offers the high degree of protection IP67 in conjunction with the insulation displacement. The communication signals of the individual network participants are modulated onto the supply voltage. For this purpose, specific power supply units with integrated data decoupling are required for AS-Interface systems.

#### Fast addressing of slaves:

The "IR addressing mode" selectable via jumper interrupts the data com-

munication on the yellow AS-Interface cable. Participants with an infrared interface can then quickly be assigned a new ID address by means of an infrared programming unit without the need to disconnect them from the AS-Interface cable. Afterwards, the "Communication Mode" can be selected again to restart the data communication.

#### Safe operation by FUSE Mode:

The device features a FUSE Mode, which permanently switches off the output in the event of failure and the unit at overload, short-circuit or overtemperature and thus protects the relatively thin AS-Interface line and the attached components. Triggering of the FUSE Mode is indicated by a flashing LED. System restart requires the intentional activation of a reset button on the front side of the unit. Thus, an accidental restart is prevented and the slaves are protected against damage.

#### Input

Rated voltage	3 AC 400-500V
Rated current	3 x 0.8A/0.7A at AC 400V/500V
Frequency	4763Hz (alternatively also DC possible)
Voltage range	3 AC 340576V, DC 450820V
2-phase operation is specified and permissible. Connection to 3 phase	

2-phase operation is specified and permissible. Connection to 3 phases is recommended due to reduced component stress. Internally fused on each phase. External fusing is only necessary as required for input line protection.

Power factor >0.52 3xT2A5 HBC (not accessible) Integrated internal fuses limited by NTC resistor Inrush current  $T_{amb} = +60$ °C, cold start (line impedence acc. EN 61000-3-3) 3 AC 400V 3 AC 500V DC 820V Peak current Ipk <50A <60A <70A

EN 61000-3-2 (harmonic current emissions) is fulfilled

<1.5A<sup>2</sup>s

Hold-up time >18ms (3-phase operation at AC 340V and rated load); also see diagram

<2.5A<sup>2</sup>s

<3.5A<sup>2</sup>s

#### **Output**

Rated voltage	DC 30.5V ±3% (nc	ot adjustable)
Rated current	8A	
Isoltation	Safe low voltage	PELV (IEC364-4-41) SELV (IEC60950)
Current limitation	> 8.4A	
Overload behaviour	FUSE Mode (conti terwards permane	nuous current for 25s, afent switch-off)
Short-circuit current	>14A, <20A (max.	5s)
Load regulation	stat. 250mV (no lo	ad / full load)
line regulation	stat. 100mV (3 AC	340550V)
Ripple	50 mV <sub>PP</sub> (500kHz ohmic load)	$z$ bandw., $50\Omega$ measurem.,
Noise (Spikes)	100mV <sub>PP</sub> (20MH; ohmic load)	z bandw., 50 $\Omega$ measurem.,
Overvoltage protection	limited to max. 50	V
Operating indicator	Green LED (exting	guishes at overload)
Output is protected aga	inst short-circuit, o	pen circuit and overload.
Use AS-Interface power	supplies only toget	ther with AS-Interface lines!

#### **Order information**

Ord	ler number I	Description
SLAS	.8.300	AS-Interface power supply unit
SLZO	02 \	Wall mounting set (two pcs. per package)

sla8e100 / 040225 1/4

#### **FUSE Mode**

The FUSE Mode (electronic fuse in the output) protects the unit from overload and overtemperature. The FUSE Mode acts as a fuse for the secondary side and protects cables and slaves.

#### Shutdown:

 At overtemperature, overload or short-circuit, the unit switches off the output after 2...5s.

#### Indicator:

• Activation of the FUSE Mode is indicated by a flashing red LED.

#### Reset/Restart:

- by intentionally pushing the Reset button on the unit front panel
- by turning off the mains voltage. Before restarting the unit, wait at least twice the time the flashing red LED needed to extinguish after the mains voltage dropped.

### **Operating and environmental data**

Non-operating -25°C...+85°C temperature range
Operating -10°C...+70°C

temperature range (measured at 25mm below the unit)

Derating from 60°C 6W/°C onwards, power reduction

necessary (see diagram)

Cooling natural convection,

no forced air-cooling necessary

Over-temperature implemented (indicated by a flashing 'Over-

protection load' LED)

Humidity protect from moisture and condensation

Vibration 2 - 17.8Hz  $\pm 1.6$ cm

Sinus
 17.8Hz – 500Hz 2g (IEC 68-2-6)
 Random
 2...800Hz 0.5m<sup>2</sup> (s<sup>3</sup>) (IEC 68-2-64)
 Shock
 15g (6ms), 10g (11ms), (IEC 68-2-27)

Degree of pollution 2 (EN 60950)

Overvoltage category II (IEC 60950), III (EN 50178)


### **Electromagnetic Compatibility (EMC)**

_	
Emissions	EN 50081-1 (EN 55011, EN 55022, Class B conducted noise, Class A radiated noise), EN 61000-3-2 (A14) and EN 61000-3-3
Immunity • Electrostatic Discharge (ESD)	EN 61000-6-2 (also includes EN 55024), EN 61000-4-2, Level 4 (withstands 8kV direct discharge, 15kV air discharge)
<ul> <li>Electromagnetic radiated fields</li> </ul>	EN 61000-4-3, Level 3 (10V/m) ENV 50204 (10V/m)
<ul><li>Burst, coupled to:</li><li>ACin lines</li><li>DCout lines</li></ul>	EN 61000-4-4, Level 4 (4kV) Level 3 (2kV)
<ul> <li>Surge transients</li> <li>Differential mode (L→PE)</li> </ul>	EN 61000-4-5, Installation class 4 (4kV)
- Common mode $(L \rightarrow N)$	Installation class 4 (2kV)
<ul> <li>Conducted noise immunity</li> </ul>	EN 61000-4-6, Level 3 (10V, 150kHz - 80MHz)
<ul> <li>Voltage dips</li> </ul>	EN 61000-4-11
• Transient immunity	Transient resistance acc. to VDE 0160 / W2 across entire load range

### **Efficiency, Reliability**

Efficiency	typ. 91.5% (3 AC 400V, 8A)
Power dissipation	typ. 22.5W (3 AC 400V, 8A)


#### **Schematic**

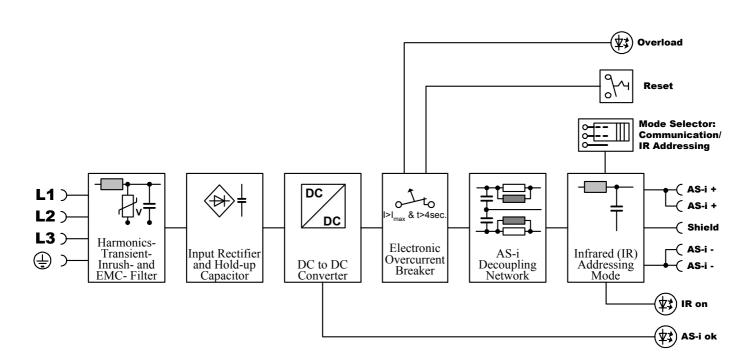

2/4 sla8e100 / 040225



# **Operating indicators and elements**

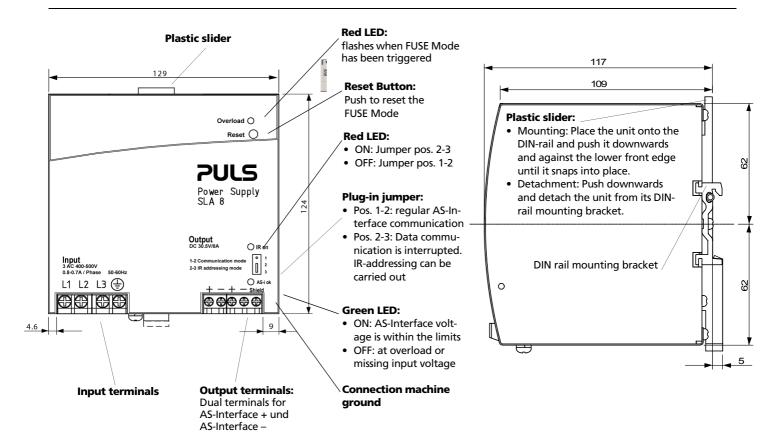

#### **Connectors and terminals**

Terminals	screws for 5	n-proof terminals with captive 5mm slotted screwdriver or Philips ed screwdriver No. 2
Position	,	ch terminals on the front panel; output clearly separate from each
Tightening torque	0.8Nm	
<ul><li>Connector size range</li><li>flexibel cable</li><li>solid cable</li></ul>	0.5-4mm <sup>2</sup> 0.5-6mm <sup>2</sup>	(20-10AWG) (20-10AWG)
Ferrules	admissible	
Stripping length	7mm	

#### **Front elements**

<b>=</b>	PE terminal
N	Input neutral
L (L1, L2, L3)	Input phase
brown	Positive AS-Interface output voltage (twice)
$\ominus$ blue	Negative AS-Interface output voltage (twice)
Shield	Connection of machine ground. (Functional earth for balancing the AS-Interface output. Connection is recommended for EMC)

#### **Construction / Mechanics**

Housing	Robust metal housing for built-in installation
Degree of protection	IP20 (EN 60529)
Class of protection	1 (IEC536); do not use without protective earth (PE)
Width w Height h Depth d	129mm 124mm 117mm (without DIN rail)
Weight	appr. 1160g

## **Installation notes**

External fusing	<ul> <li>not necessary (internal fuse)</li> <li>observe national regulations</li> <li>Circuit breaker with B-characteristic min. 6A/ phase or slower action, or alternatively min. 6A HBC fuse</li> </ul>
Mounting position	vertical; input below, output above
Free space for cooling	above / below 25mm recommended left / right 15mm recommended
Always connect PE before operating the unit!	
Operation without AS-Interface: This AS-Interface PSU has an in-	


**Operation without AS-Interface:** This AS-Interface PSU has an inductive output. When operating without AS-Interface structure (e.g. in a laboratory test) you should connect a  $470\mu\text{F}/35\text{V}$  capacitor between AS-Interface + and AS-Interface – as commercial electronic loads in combination with the data decoupling often tend to oscillate, and the oscillation may exceed the permitted modulation voltage. Otherwise, equipment may be destroyed.

sla8e100 / 040225 3 / 4


Data sheet

# **Functional diagrams**


#### Start behaviour

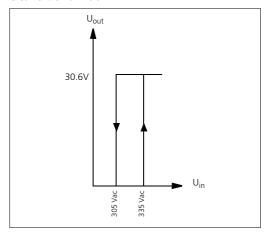


### **Efficiency / Power dissipation**

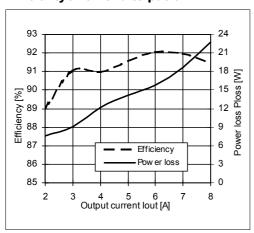


#### **Hold-up time**

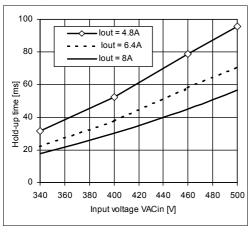


#### **FUSE Mode / Signals and LED**

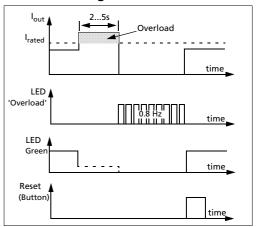

# Overload response until FUSE Mode is activated

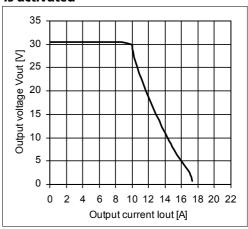

#### **Derating**

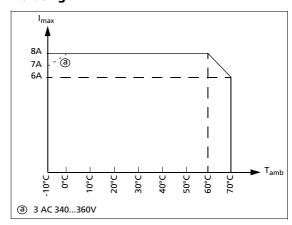

Specifications valid for 3 x AC 400V input voltage, +25°C ambient temperature, and 5 min run-in time, unless otherwise stated. They are subject to change without prior notice.

# Your partner in power supply:





PULS GmbH
Arabellastraße 15
D-81925 München
Tel.: +49 89 9278-0
Fax: +49 89 9278-199
www.puls-power.com

4/4 sla8e100/040225